


FULL WALL MURAL INSTALLATION INSTRUCTIONS - PAGE 2

INSTALL 1/4" X 3/4" PRE-PAINTED MOULDING OVER STAPLES



BASE
TRIM MURAL AT BASE AND CORNER

INSTALL MOULDING WITH FINISHING NAILS
(SET NAILS, USE PUTTY AND TOUCH UP WITH PAINT)

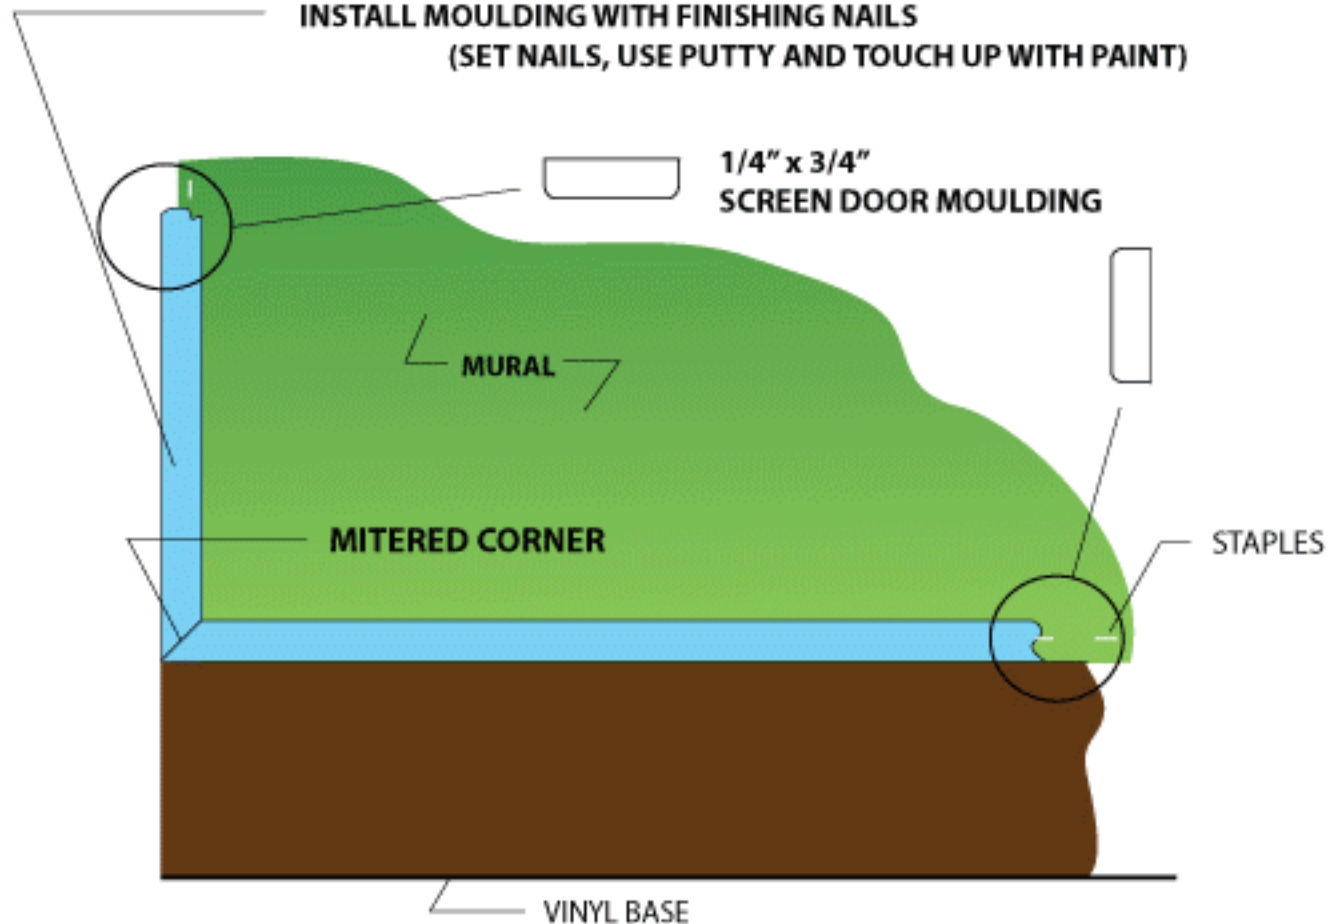

MOULDING DETAIL