
Installation Options STAPLE AND WOOD TRIM

OUR MOST POPULAR TYPE OF INSTALLATION

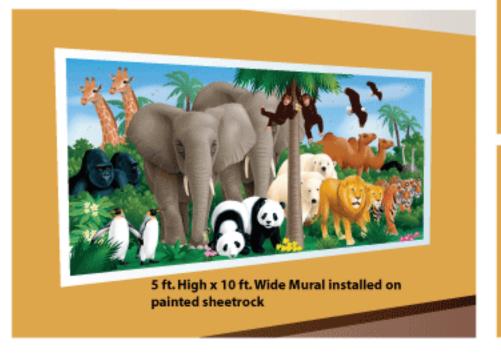








USING 1/4" STAPLES. **FASTEN MURAL** ALONG TOP EDGE FIRST. STAPLE EACH LOWER CORNER, THEN AROUND THE EDGES. KEEP MURAL **PULLED TIGHT AS** YOU STAPLE.



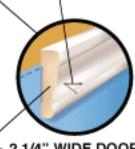

2 1/4" WIDE DOOR AND WINDOW CASING (PAINT BEFORE YOU INSTALL)

1/2" 45° MITER CUT -CUT WOOD TRIM 1" LONGER THAN MURAL WOOD TRIM (DOOR AND WINDOW CASING) Available at Home Depot ∠ MURAL −